



## LT 50 CSI - LT 50 CMO - LT 50 NHK LT 60 CSI - LT 60 CMO - LT 60 NHK



### EN Installation instructions

### ES Guía de instalación

### PT Guia de instalação

### EL Οδηγός εγκατάστασης

Ref. 5053403B

HOME MOTION BY

somfy®

### Somfy worldwide

Argentina : Somfy Argentina

Tel: +55 11 (0) 4737-3700

France : Somfy France

Tel: +33 (0) 820 374 374

Jeddah :

spol. s.r.o.

Tel: +966 2 69 83 353

Slovak republic : Somfy,

Kuwait : Somfy Kuwait

Tel: +421 337 718 638

Germany : Somfy GmbH

Tel: +49 (0) 7472 930 0

South Korea : Somfy JOO

Tel: +421 905 455 259

Lebanon :

Tel: +82 (0) 2594 4331

Spain : Somfy España SA

Tel: +60 (0) 3 228 74743

Malaysia : Somfy Malaysia

Tel: +34 (0) 934 800 900

Sweden : Somfy Nordic AB

Tel: +46 (0) 40 16 59 00

Hungary : Somfy Kft

Tel: +36 1814 5120

Mexico : Somfy Mexico

SA de CV

India : Somfy India PVT Ltd

Tel: +91 11 4165 9176

Switzerland : Somfy A.G.

Tel: +41 (0) 44 838 40 30

Morocco : Somfy Maroc

Tel: +212-22443500

Indonesia : Somfy Syria

Tel: +963-9-55580700

Spain : Somfy Representative Office

Tel: +62 (0) 21 719 3620

Netherlands : Somfy BV

Tel: +31 (0) 23 55 44 900

Taiwan : Somfy Development

and Taiwan Branch

Tel: +86 (0) 2 8509 8934

Poland : Somfy Sp. z o.o.

Tel: +48 (22) 50 95 300

Tunisia : Somfy Tunisia

Tel: +216-98303603

Italy : Somfy Italia s.r.l.

Tel: +351 229 396 840

Portugal : Somfy Portugal

Tel: +351 229 396 840

Romania : Somfy SRL

Tel: +40 (0) 216 651 30 15

United Arab Emirates :

Somfy Gulf

Tel: +971 (0) 4 88 32 808

Japan : Somfy KK

Tel: +81 (0) 45 481 6800

Jordan : Somfy Jordan

Tel: +962-6-5821615

Kingdom of Saudi Arabia:

Somfy Saudi

Riyadh :

Tel: +966 1 47 23 020

Finland : Somfy Nordic AB

Finland

Tel: +358 (0) 9 57 130 230

Tel: +966 1 47 23 203

Argentina : Somfy Argentina

Tel: +55 11 (0) 4737-3700

France : Somfy France

Tel: +33 (0) 820 374 374

Jeddah :

spol. s.r.o.

Tel: +966 2 69 83 353

Slovak republic : Somfy,

Kuwait : Somfy Kuwait

Tel: +421 337 718 638

Germany : Somfy GmbH

Tel: +49 (0) 7472 930 0

South Korea : Somfy JOO

Tel: +421 905 455 259

Lebanon :

Tel: +82 (0) 2594 4331

Spain : Somfy España SA

Tel: +60 (0) 3 228 74743

Malaysia : Somfy Malaysia

Tel: +34 (0) 934 800 900

Sweden : Somfy Nordic AB

Tel: +46 (0) 40 16 59 00

Hungary : Somfy Kft

Tel: +36 1814 5120

Mexico : Somfy Mexico

SA de CV

India : Somfy India PVT Ltd

Tel: +91 11 4165 9176

Switzerland : Somfy A.G.

Tel: +41 (0) 44 838 40 30

Morocco : Somfy Maroc

Tel: +212-22443500

Indonesia : Somfy Syria

Tel: +963-9-55580700

Spain : Somfy Representative Office

Tel: +62 (0) 21 719 3620

Netherlands : Somfy BV

Tel: +31 (0) 23 55 44 900

Taiwan : Somfy Development

and Taiwan Branch

Tel: +86 (0) 2 8509 8934

Poland : Somfy Sp. z o.o.

Tel: +48 (22) 50 95 300

Tunisia : Somfy Tunisia

Tel: +216-98303603

Italy : Somfy Italia s.r.l.

Tel: +351 229 396 840

Portugal : Somfy Portugal

Tel: +351 229 396 840

Romania : Somfy SRL

Tel: +40 (0) 216 651 30 15

United Arab Emirates :

Somfy Gulf

Tel: +971 (0) 4 88 32 808

Japan : Somfy KK

Tel: +81 (0) 45 481 6800

Jordan : Somfy Jordan

Tel: +962-6-5821615

Kingdom of Saudi Arabia:

Somfy Saudi

Riyadh :

Tel: +966 1 47 23 020

Finland : Somfy Nordic AB

Finland

Tel: +358 (0) 9 57 130 230

Tel: +966 1 47 23 203

Argentina : Somfy Argentina

Tel: +55 11 (0) 4737-3700

France : Somfy France

Tel: +33 (0) 820 374 374

Jeddah :

spol. s.r.o.

Tel: +966 2 69 83 353

Slovak republic : Somfy,

Kuwait : Somfy Kuwait

Tel: +421 337 718 638

Germany : Somfy GmbH

Tel: +49 (0) 7472 930 0

South Korea : Somfy JOO

Tel: +421 905 455 259

Lebanon :

Tel: +82 (0) 2594 4331

Spain : Somfy España SA

Tel: +60 (0) 3 228 74743

Malaysia : Somfy Malaysia

Tel: +34 (0) 934 800 900

Sweden : Somfy Nordic AB

Tel: +46 (0) 40 16 59 00

Hungary : Somfy Kft

Tel: +36 1814 5120

Mexico : Somfy Mexico

SA de CV

India : Somfy India PVT Ltd

Tel: +91 11 4165 9176

Switzerland : Somfy A.G.

Tel: +41 (0) 44 838 40 30

Morocco : Somfy Maroc

Tel: +212-22443500

Indonesia : Somfy Syria

Tel: +963-9-55580700

Spain : Somfy Representative Office

Tel: +62 (0) 21 719 3620

Netherlands : Somfy BV

Tel: +31 (0) 23 55 44 900

Taiwan : Somfy Development

and Taiwan Branch

Tel: +86 (0) 2 8509 8934

Poland : Somfy Sp. z o.o.

Tel: +48 (22) 50 95 300

Tunisia : Somfy Tunisia

Tel: +216-98303603

Italy : Somfy Italia s.r.l.

Tel: +351 229 396 840

Portugal : Somfy Portugal

## EN 3.5 Fitting the emergency crank

- Fit the crank handle onto the motor head.

► See illustration F

## 3.6 Fitting the motorised tube

- Mount the motorised tube on the end bracket.
- Mount the motorised tube on the motor bracket.
- Fit the stop ring.

► See illustration G

## 3.7 Wiring

- Switch off the power supply.
- Connect the motor according to the information in the table below:

	230 V	120 V	Wire
1	Blue	White	Neutral
2	Brown	Black	Live
3	Black	Red	Live
4	Yellow/Green	Green	Earth

► See illustration H

## 4. Commissioning

### 4.1 Checking the direction of rotation

- Remove the protective housing.
- Press simultaneously on the white and yellow push-buttons to operate them.
- Switch on the power supply.
- Press the "Up" switch at the control point:

  - a) If the roller shutter or awning rises, the wiring is correct: move onto the section entitled "Adjusting the end limits".
  - b) If the roller shutter or awning lowers, the wiring is not correct: move onto the next step

- Switch off the power.
- Reverse the brown wire and the

black wire on the control point.

- Switch the power supply back on.
- Press the "Up" button on the control point to check that the upper end limit is set.

► See illustration I

### 4.2 Adjusting the end limits with the momentary action-type switch

#### 4.2.1 Lower end limit

- Lower the roller shutter or awning to the required lowered position by pressing on the "Down" button on the control point.
- Release the "Down" button when the roller shutter or awning reaches the required lowered position.

- Looking at the motor head end-on:

- a) If the roller shutter or awning lowers from the right-hand side of the head, press the yellow button to unlock it: the lower end limit is set.
- b) If the roller shutter or awning lowers from the left-hand side of the head, press the yellow button to unlock it: the lower end limit is set.

► See illustration J

#### 4.2.2 Upper end limit

- Raise the roller shutter or awning to the required raised position by pressing on the "Up" button on the control point.
- Release the "Up" button when the roller shutter or awning reaches the required raised position.
- Looking at the motor head end-on:

  - a) If the roller shutter or awning lowers from the right-hand side of the head, press the white button to unlock it: the lower end limit is set.
  - b) If the roller shutter or awning lowers from the left-hand side of the head, press the white button to unlock it: the lower end limit is set.

► See illustration J

#### 4.3.2 Upper end limit

- Raise the roller shutter or awning to the required raised position by pressing on the "Up" button on the control point.
- Release the "Up" button when the roller shutter or awning reaches the required raised position.
- Looking at the motor head end-on:

  - a) If the roller shutter or awning lowers from the right-hand side of the head, press the white button to unlock it: the lower end limit is set.
  - b) If the roller shutter or awning lowers from the left-hand side of the head, press the white button to unlock it: the lower end limit is set.

► Illustration M

upper end limit is set.

- b) If the roller shutter or awning lowers from the left-hand side of the head, press the white button to unlock it: the upper end limit is set.

► See illustration K

### 4.3 Adjusting the end limits with the fixed position switch

#### 4.3.1 Lower end limit

- Lower the roller shutter or awning to the required lowered position by pressing on the "Down" button on the control point.
- Release the "STOP" button when the roller shutter or awning reaches the required lowered position.

- Adjust the position with the Up/Down buttons.

- Looking at the motor head end-on:

  - a) If the roller shutter or awning lowers from the right-hand side of the head, press the yellow button to unlock it: the lower end limit is set.
  - b) If the roller shutter or awning lowers from the left-hand side of the head, press the yellow button to unlock it: the lower end limit is set.

► See illustration L

#### 5. Operation

##### 5.1 Operating the control point

- Press the "Up" button to raise the roller shutter or awning.
- Press the "Down" button to lower the roller shutter or awning.

##### 5.2. Operating the emergency crank

Caution! Never operate the roller shutter or awning via the control point while using the emergency crank!

- Switch off the power supply.

- Hook the Somfy emergency crank into the ring.

- Adjust the position with the Up/Down buttons.

- Looking at the motor head end-on:

- a) If the roller shutter or

awning lowers from the right-hand side of the head, press the white button to unlock it: the upper end limit is set.

► See illustration K

### 4.4 Checking the settings











- Check the setting of the upper and lower end limits using the control point.

### 4.5 Fitting the protective housing

- If the motor is used outdoors or awning with the push-buttons facing upwards and without pull tabs, the protective housing should be refitted.

- For all other fitting arrangements such as the push-buttons facing downwards or using adjustment pull tabs, for example, the protective housing should not be fitted.

► See illustration L

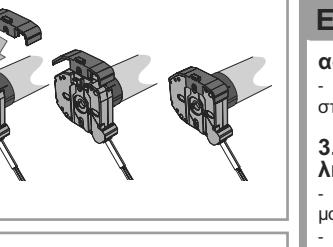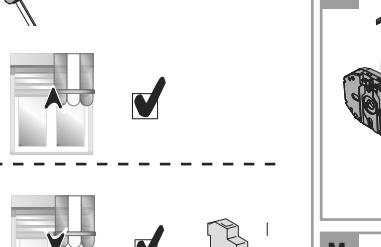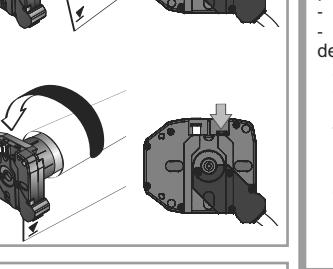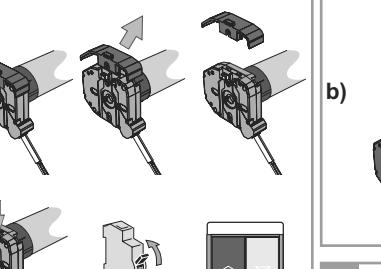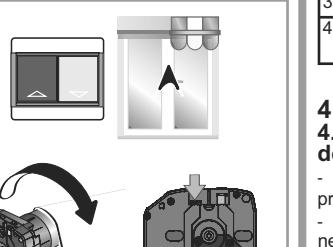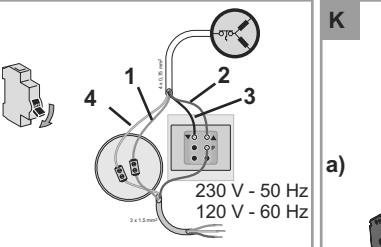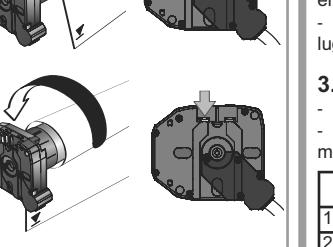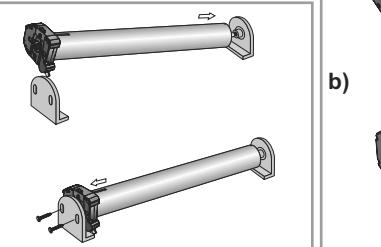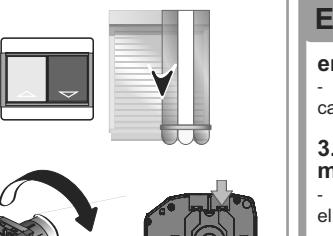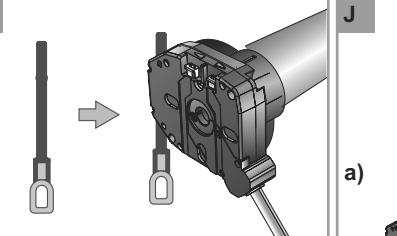

## ES 3.5 Montaje de la manivela de emergencia

- Corte la corriente.
- Invierte el hilo marrón y el hilo negro en el panel de control.

- Vuelva a encender.

- Pulse el botón Subir del panel de control para asegurarse de que la persiana enrollable o el estor sube.

► Ver figura F

## 3.6 Montaje del tubo motorizado

- Monte el tubo motorizado sobre el soporte boquilla.

- Monte el tubo motorizado sobre el soporte motor.

- Coloque la anilla de tope en su lugar.

► Ver figura G

## 3.7 Cableado

- Corte la alimentación eléctrica.
- Conecte el motor según la información de la siguiente tabla:

	230 V	120 V	Cable
1	Azul	Blanco	Neutro
2	Marrón	Negro	Fase
3	Rojo	Rojo	Fase
4	Verde-Amarillo	Verde	Tierra

► Ver figura H

## 4. Puesta en marcha

### 4.1 Control del sentido de rotación

- Retire la cubierta de protección.

- Pulse al mismo tiempo los botones pulsadores blanco y amarillo para activarlos.

- Encienda.

- Pulse la tecla Subir del panel de control:

- a) Si la persiana enrollable o el estor sube, el cableado es correcto: continúe en el apartado "Ajuste de los finales de carrera".

b) Si la persiana enrollable o el estor sube a la izquierda del cabezal, pulse el botón blanco para desbloquearlo: el final de carrera inferior está ajustado.

- Ajuste la posición con las teclas Subir/Bajar.

- Colóquese frente al cabezal de motor:

- a) Si la persiana enrollable o el estor sube a la derecha del cabezal, pulse el botón amarillo para desbloquearlo: el final de carrera inferior está ajustado.

b) Si la persiana enrollable o el estor sube a la izquierda del cabezal, pulse el botón blanco para desbloquearlo: el final de carrera inferior está ajustado.

► Ver figura J

### 4.2 Final de carrera superior

- Suba la persiana enrollable o el estor a la posición superior deseada pulsando la tecla Subir del panel de control.

- Pulse la tecla STOP una vez que la persiana enrollable o el estor haya alcanzado la posición superior.

- Ajuste la posición con las teclas Subir/Bajar.

- Deslice el gancho de la manivela de emergencia Somfy dentro de la anilla.

- Gire la manivela para subir o bajar la persiana enrollable o el estor.

► Figura M

► Ver figura K

### 4.3 Ajuste de los finales de carrera con inversor de posición fija

#### 4.3.1 Final de carrera inferior

- Baje la persiana enrollable o el estor a la posición inferior deseada pulsando la tecla Bajar del panel de control.

- Pulse la tecla STOP una vez que la persiana enrollable o el estor haya alcanzado la posición inferior.

- Colóquese frente al cabezal de motor:

- a) Si la persiana enrollable o el estor baja a la derecha del cabezal, pulse el botón amarillo para desbloquearlo: el final de carrera inferior está ajustado.

b) Si la persiana enrollable o el estor baja a la izquierda del cabezal, pulse el botón blanco para desbloquearlo: el final de carrera inferior está ajustado.

► Ver figura K

### 4.4 Control de los ajustes

#### 4.4.1 Final de carrera superior

- Pulse el botón Subir para subir la persiana enrollable o el estor.

- Pulse el botón Bajar para bajar la persiana enrollable o el estor.

### 5.2. Uso de la manivela de emergencia

Atención: no controle nunca la persiana enrollable o el estor desde el panel de control mientras se esté utilizando la manivela de emergencia.

- Corte la alimentación eléctrica.

- Deslice el gancho de la manivela de emergencia Somfy dentro de la anilla.

- Gire la manivela para subir o bajar la persiana enrollable o el estor.

► Figura M

► Ver figura L

## 5. Utilización

### 5.1 Utilización del panel de control

- Pulse el botón Subir para subir la persiana enrollable o el estor.

- Pulse el botón Bajar para bajar la persiana enrollable o el estor.

### 5.2. Uso de la manivela de emergencia

Atención: no controle nunca la persiana enrollable o el estor desde el panel de control mientras se esté utilizando la manivela de emergencia.

- Corte la alimentación eléctrica.

- Deslice el gancho de la manivela de emergencia